


Kom igång: Snabbguide

Funktionsindikering ges med fyra olika färger.

 Funktionssymbolen lyser beroende på vilken funktion som är aktiv.

Inget sken

Fläkten är av eller aktiverad med kontinuerlig gång.

Blått sken

Fläkten går på grund av förhöjd fukt.

Blinkande blått

Fläkten går på grund av att den upptäckt att den kan sänka fukten i rummet.

Grönt sken

Luktsensorn har aktiverat fläkten

Lila sken

Fläkten är startad av vädringsfunktionen.

Gult sken

Fläkten går på timer.

Blinkande gult

Tillslagsfördröjningstimer räknar ner, snabbare blinkningar mot slutet.

 



Snabbguide för Intellivent SKY


För att få tillgång till de funktioner som går att programmera. Tryck först på funktionssymbolen.





 




 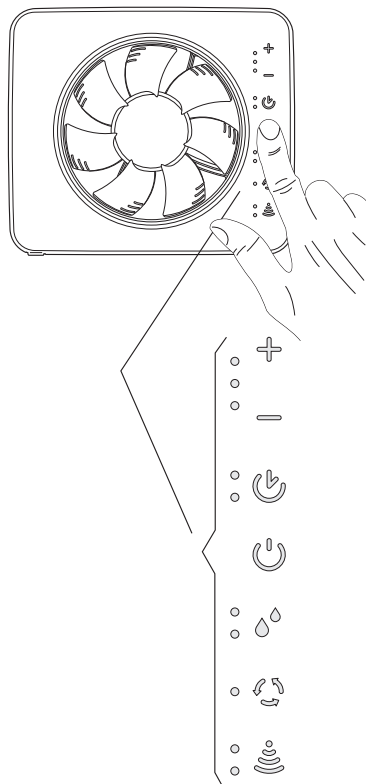

















 




 

 















 





Alla programmerbara funktioners symboler lyser upp.




För att aktivera önskad funktion tryck på någon av de fyra symbolerna och följ sedan instruktionen till höger. Processen avslutas sedan med att trycka på funktionssymbolen  2 ggr.



<p>Timer Välj tid: Ett tryck i taget 15 min   30 min  </p>	<p>Aktivering/avaktivering av tillslagsfördröjning: Håll kvar 2 sekunder. Lamporna blinkar 3 ggr 15 min   30 min  </p>	<p>Öka eller minska luftflödet: Tryck på +/- knapparna.   </p>
<p>Fuktstyrning Indikering av respons: Respektive lampa lyser. Hög   Medel   Låg   Ej aktiv  </p>	<p>Stega framåt för val av respons: Håll kvar 2 sekunder Hög   Medel   Låg   Ej aktiv  </p>	<p>Öka eller minska luftflöde vid fuktaktiverad gång: Tryck på +/- knapparna.   </p>
<p>Kontinuerlig gång Aktivera: Tryck tills lampan tänds.  </p>	<p>Avaktivera: Tryck tills lampan släcks.  </p>	<p>Flödesinställning: Öka eller minska luftflödet: Tryck på +/- knapparna.   </p>
<p>Ljus och luktsensor Indikering för aktiv / inaktiv Respektive lampa lyser. Ljus   Lukt   Lukt och ljus   Ej aktiv  </p>	<p>Aktivera/avaktivera: Ljussensor till/ från. Tryck upprepat tills lampan tänds eller släcks. Ljus   Luktsensor till/ från. Tryck upprepat tills lampan tänds eller släcks. Lukt  </p>	<p>Öka eller minska luftflödet: Välj funktion för inställning av timer för inställning av ljussensor. Välj funktion för fukt funktionen för inställning av luktsensorn Tryck på +/- knapparna.   </p>
<p>Återställning (till fabriksinställning)</p>	<p>Aktivera 1 tryck </p>	<p>Håll minst 5 sekunder (2:a trycket). </p>

Getting started: Quick guide

Function indication is given with different colours.

 The function symbol is lit depending on the active function.

No light
The fan is off or activated for continuous operation.

Blue light
The fan runs due to increased humidity.

Flashing blue light
The fan runs because it has detected that it can lower the humidity in the room.

Green light
The air quality sensor has activated the fan.

Purple light
The fan has been started by the airing function.

Yellow light
The fan runs on the timer

Flashing yellow
The delay timer counts down, faster flashes towards the end.




Quickguide for Intellivent SKY


To access the functions that can be programmed. First, press the function icon.

 








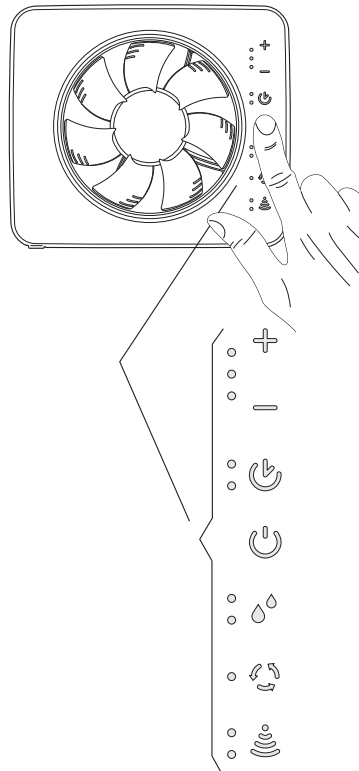




 







 



















 









All programmable function symbols light up.



To activate the desired function, press any of the four symbols and then follow the instructions to the right. The process is then ended by pressing the function icon  twice.



<p>Timer Select time:</p> <p>One press at a time</p> <p>15 min   30 min  </p>	<p>Activate / deactivate delayed start</p> <p>Hold for 2 seconds. The lamps flash 3 times.</p> <p>15 min   30 min  </p>	<p>Increase or decrease air flow:</p> <p>Press the +/- buttons</p> <p> </p>
<p>Humidity control Response indication:</p> <p>The corresponding lamp lights up</p> <p>Fast   Normal   Slow   Deactive  </p>	<p>Step forward for response selection:</p> <p>Hold for 2 seconds</p> <p>Fast   Normal   Slow   Deactive  </p>	<p>Increase or decrease air flow during humidity-activated operation:</p> <p>Press the +/- buttons</p> <p> </p>
<p>Continuous operation Activate</p> <p>Press until the lamp comes on</p> <p> </p>	<p>Deactivate:</p> <p>Press until the lamp goes out</p> <p> </p>	<p>Setting the air flow: Increase or decrease</p> <p>Press the +/- buttons</p> <p> </p>
<p>Light and air quality sensor Indications:</p> <p>The corresponding lamp lights up</p> <p>Light sensor   Air quality sensor   Light sensor & air quality sensor   Inactive  </p>	<p>Activate/deactivate:</p> <p>Light sensor on/off Press repeatedly until the lamp comes on or off</p> <p>Light sensor   Air quality sensor on/off. Same as for light sensor.</p> <p>Air quality sensor  </p>	<p>Setting the air flow: Increase or decrease</p> <p>Select the Timer speed function, which is common for the flow with lightsensor.</p> <p>Air quality function has same speed as humidity function.</p> <p>Press the +/- buttons</p> <p> </p>
<p>Reset (to factory settings)</p> <p>Activate 1 touch</p> <p></p>	<p>Touch and hold 5 sec. (2:nd touch).</p> <p></p>	